



GCP-30 Series Genset Control



Installation
Software Version 4.3xxx

GCP-31/BPD Package

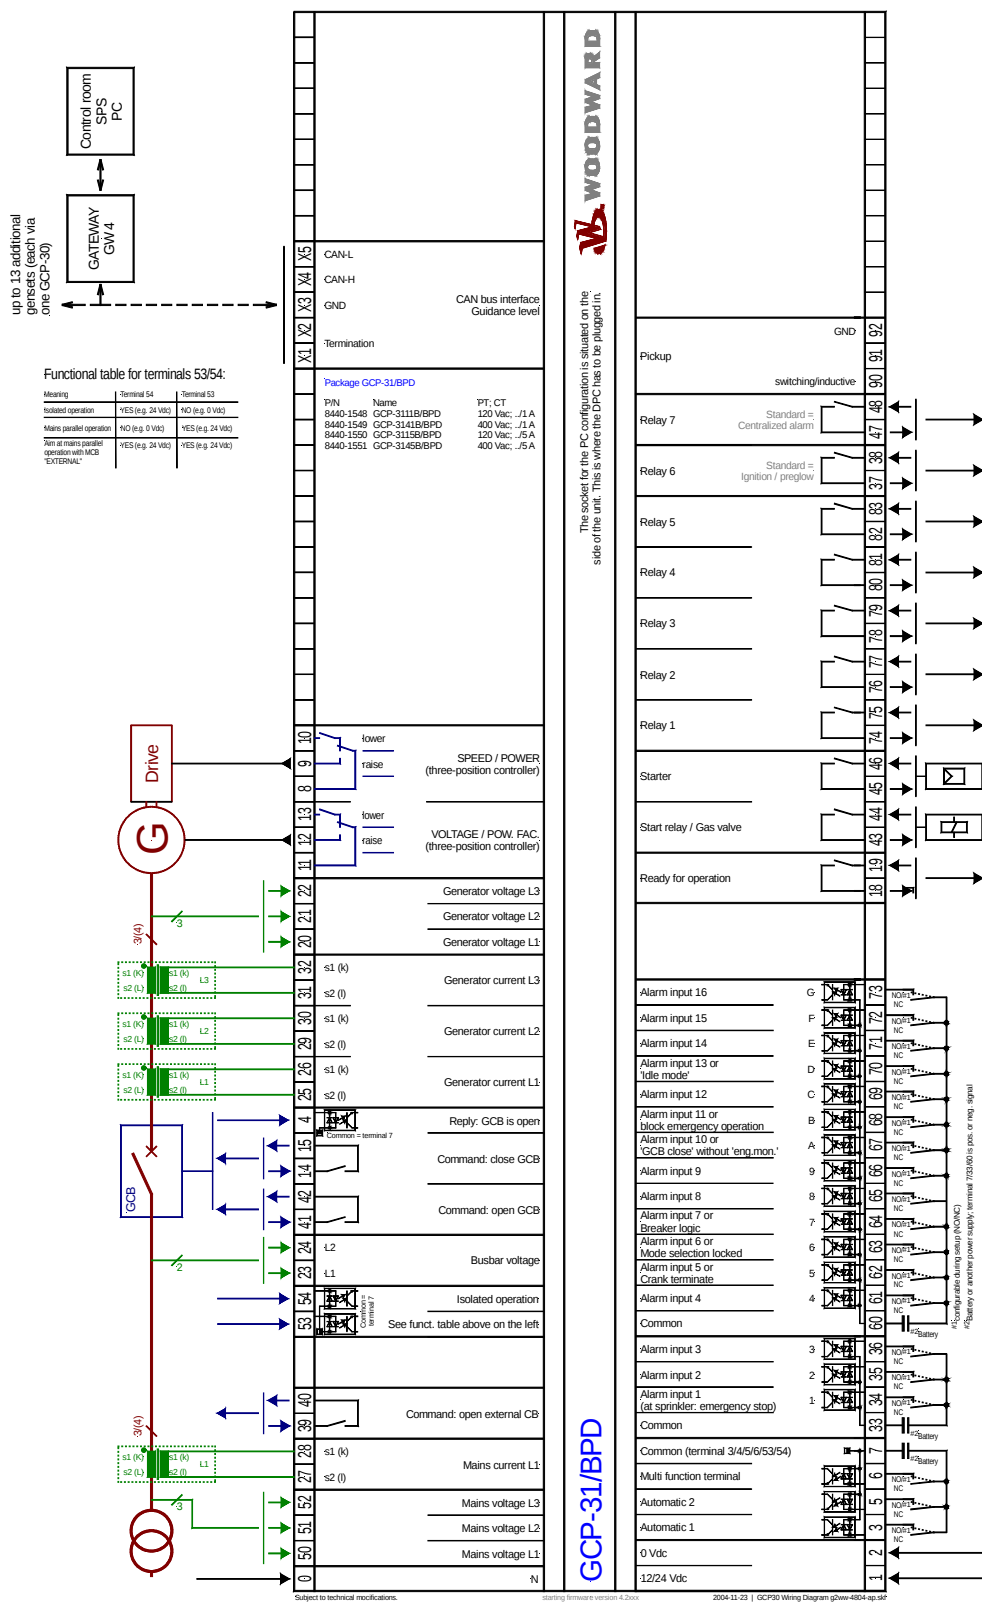


Figure 4-1: Wiring diagram GCP-31/BPD Package

GCP-31/BPQ Package

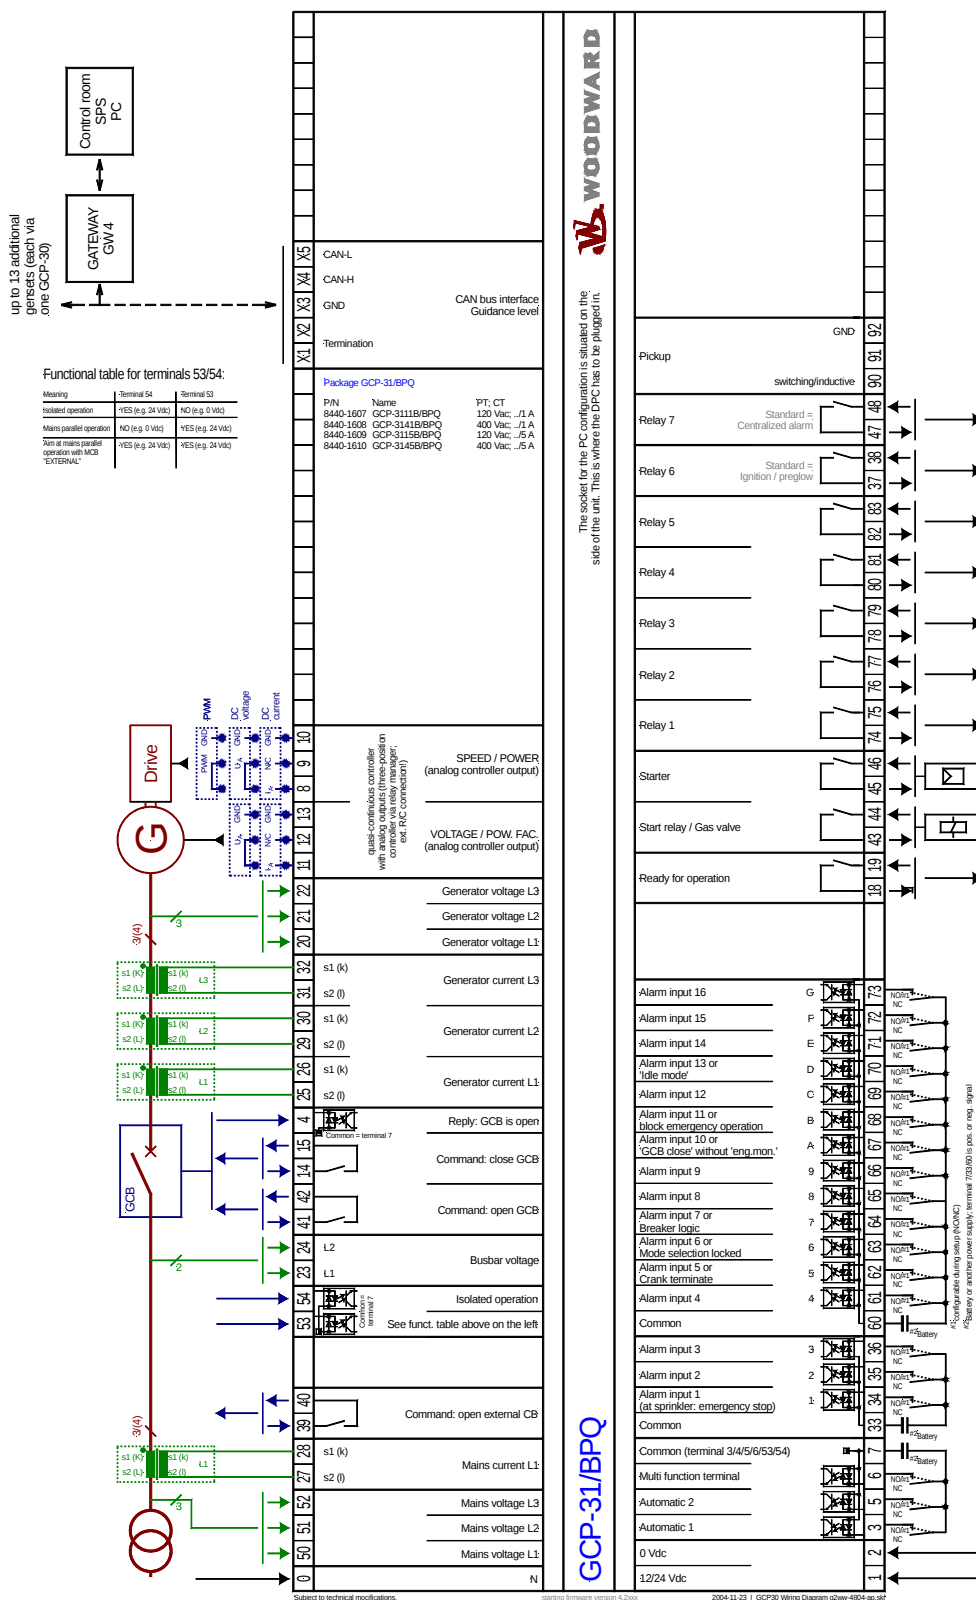


Figure 4-2: Wiring diagram GCP-31/BPQ Package

GCP-31/XPD Package

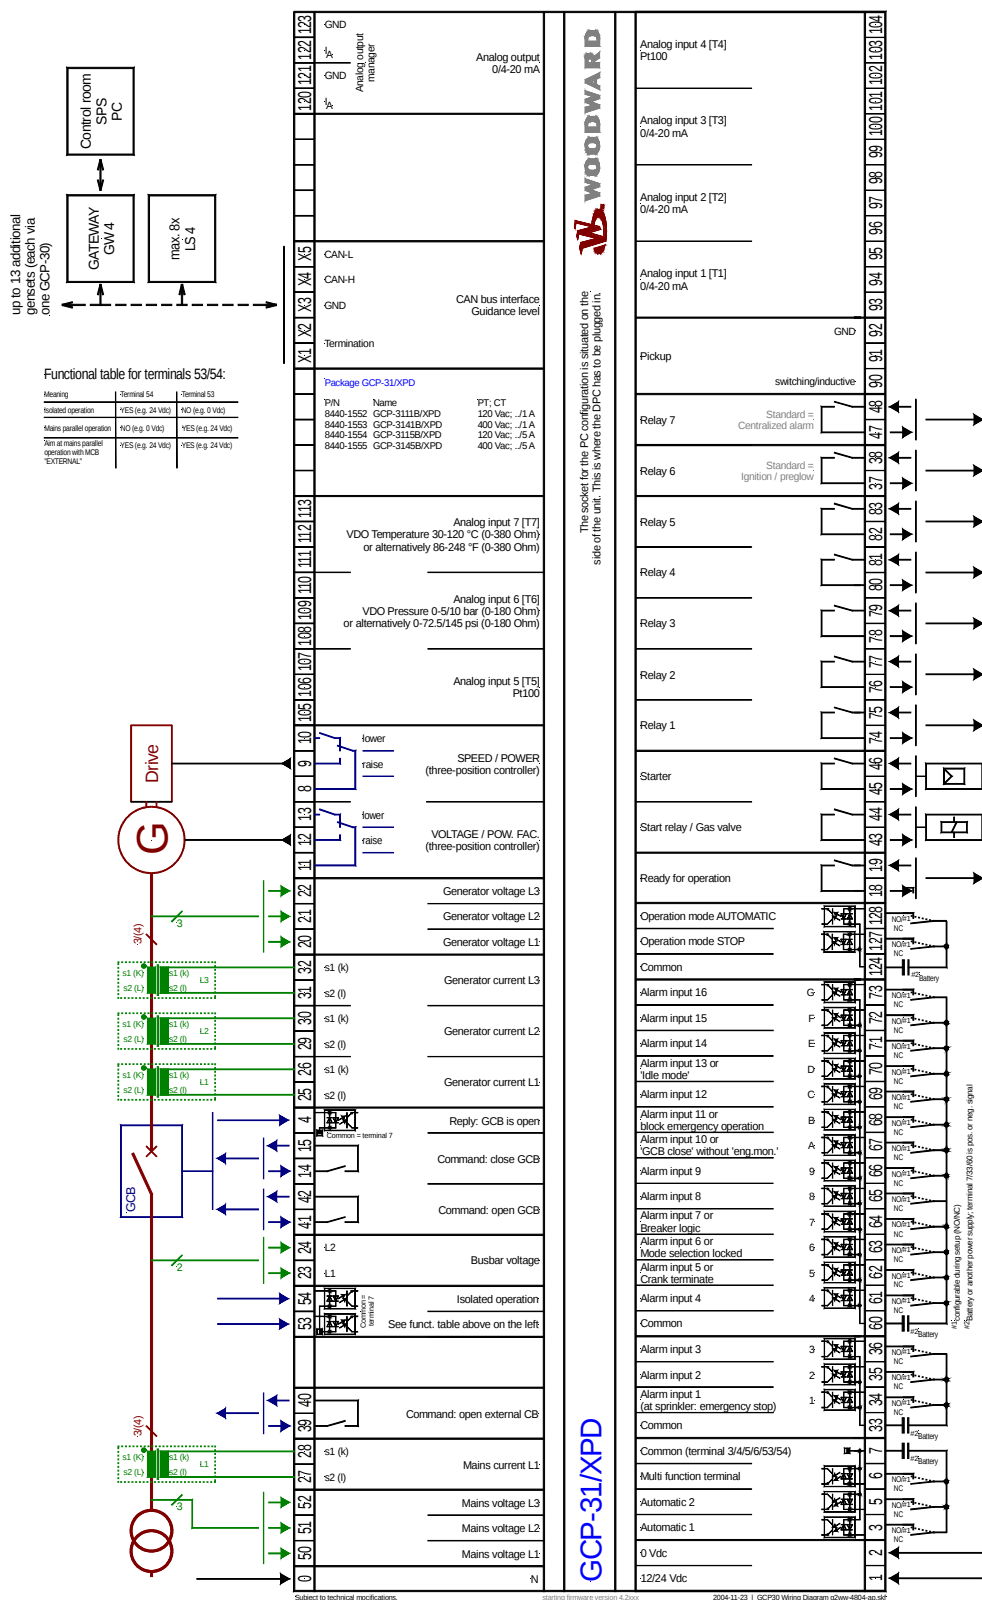


Figure 4-3: Wiring diagram GCP-31/XPD Package

GCP-31/XPQ Package

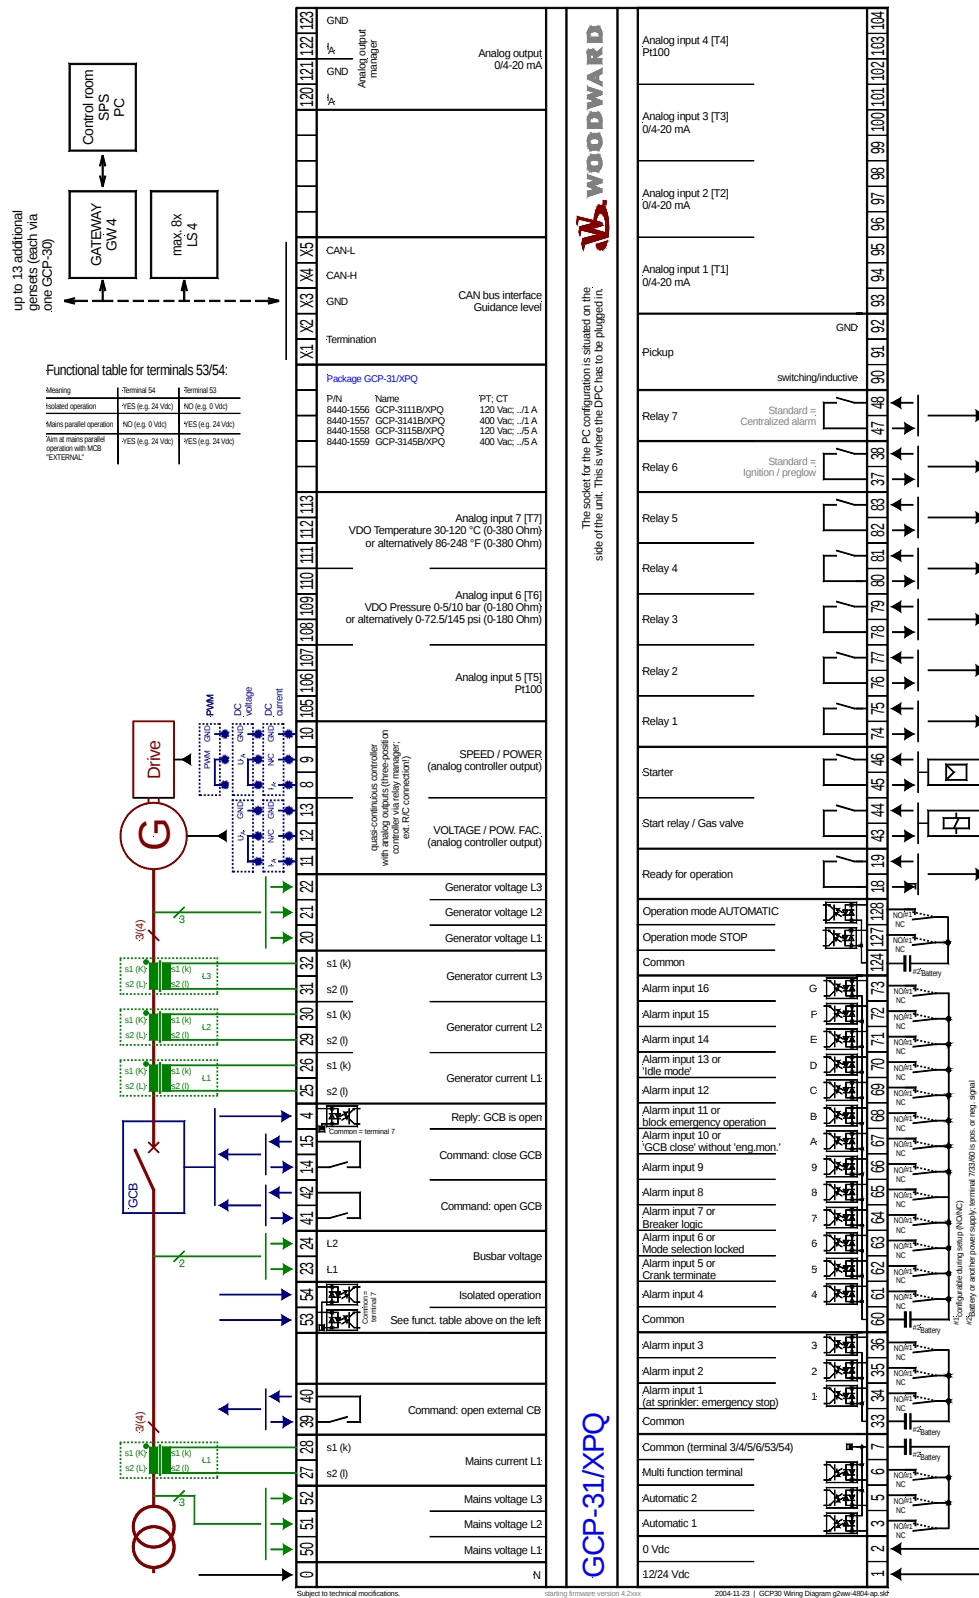


Figure 4-4: Wiring diagram GCP-31/XPQ Package

GCP-31/XPQ+SB03 Package

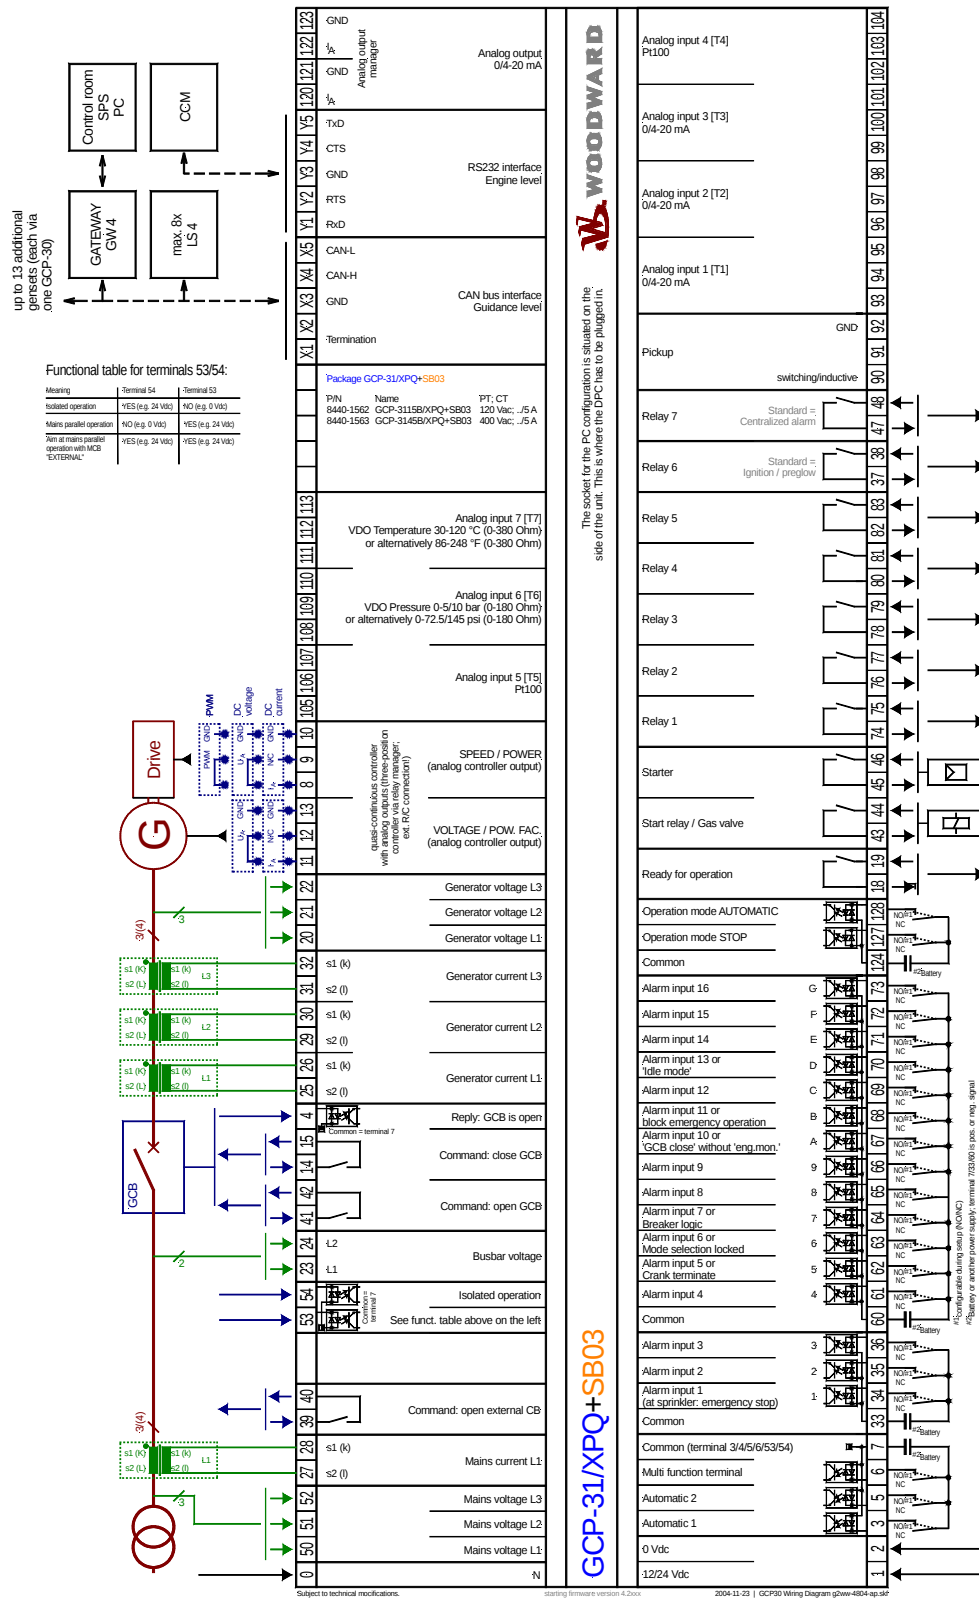


Figure 4-5: Wiring diagram GCP-31/XPQ+SB03 Package

GCP-31/XPQ+SC06 Package

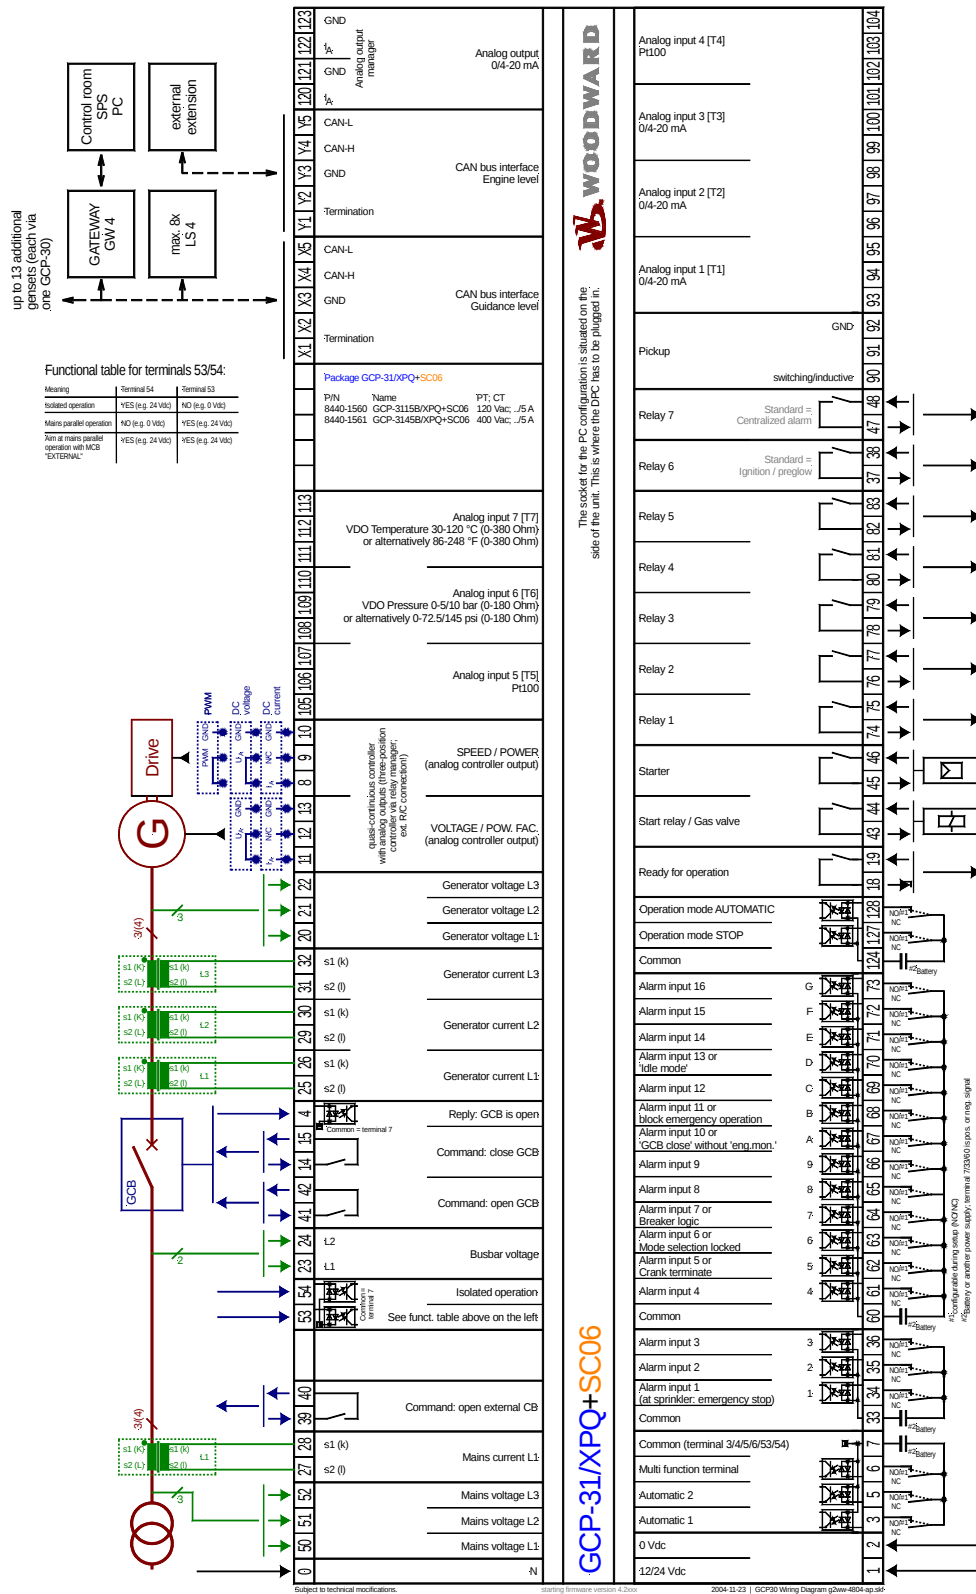


Figure 4-6: Wiring diagram GCP-31/XPO+SC06 Package

GCP-31/RPQ+SC08 Rental Package

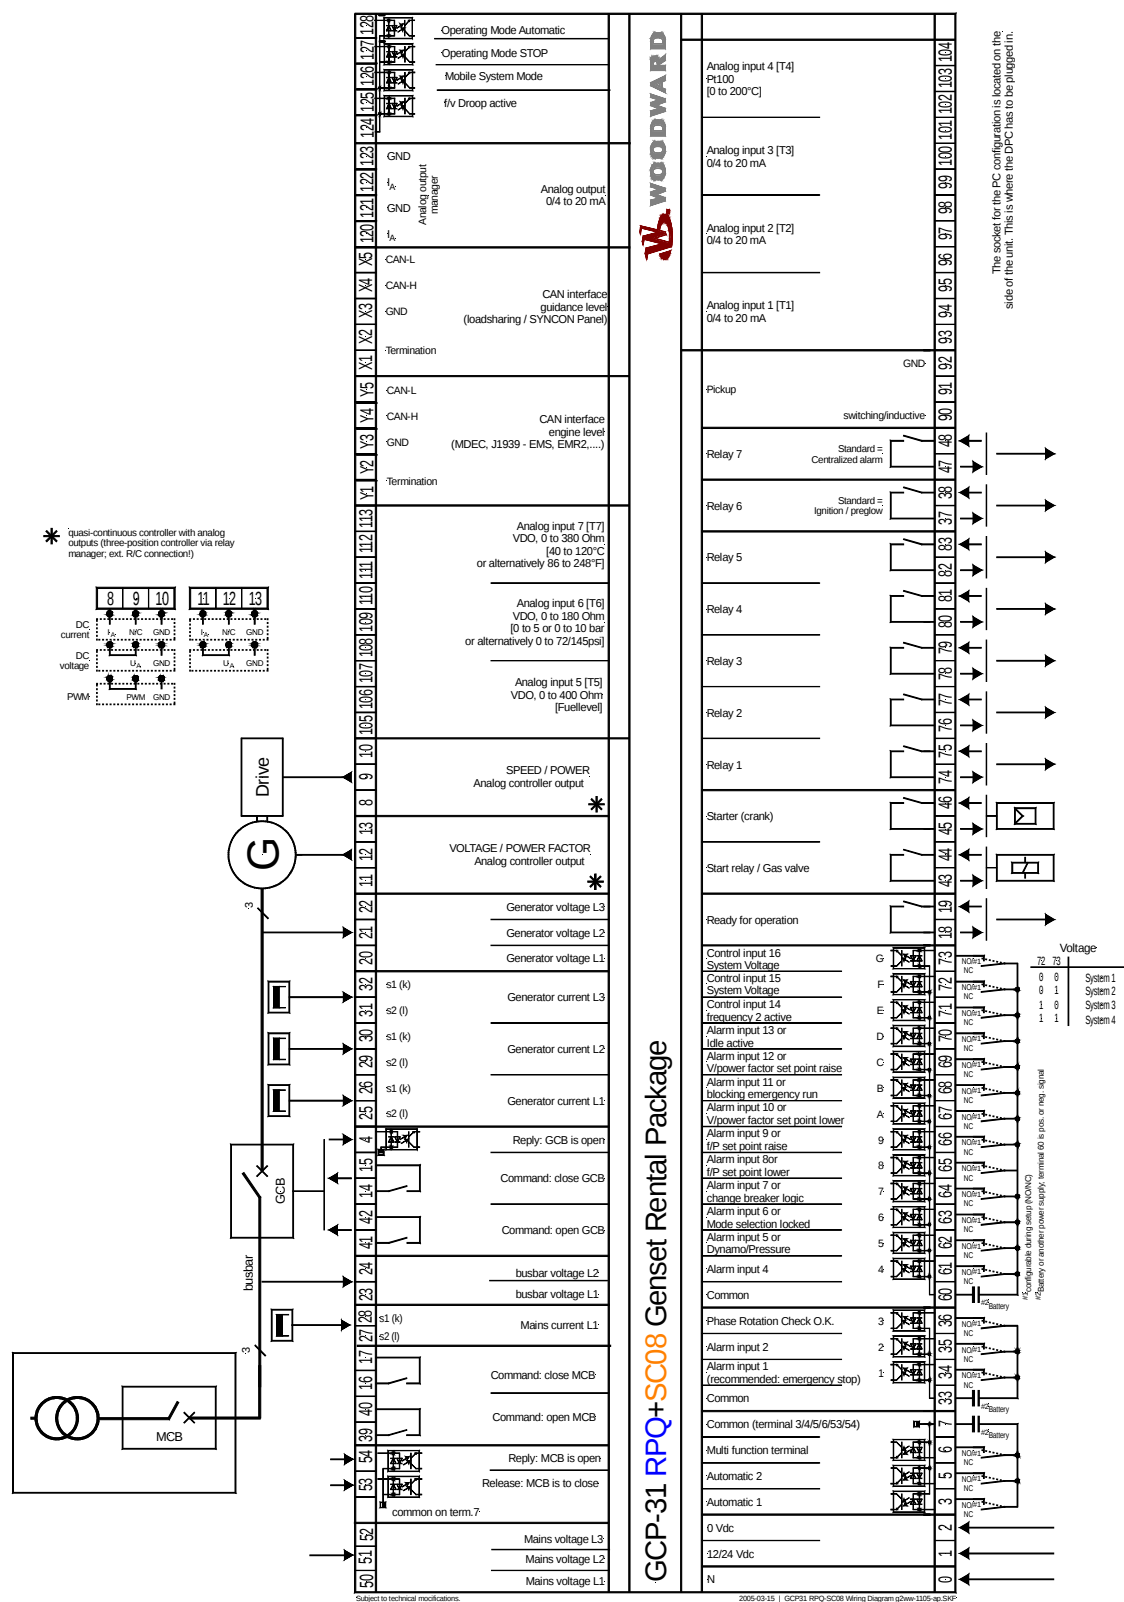


Figure 4-7: Wiring diagram GCP-31/RPQ+SC08 Rental Package

GCP-32/BPD Package

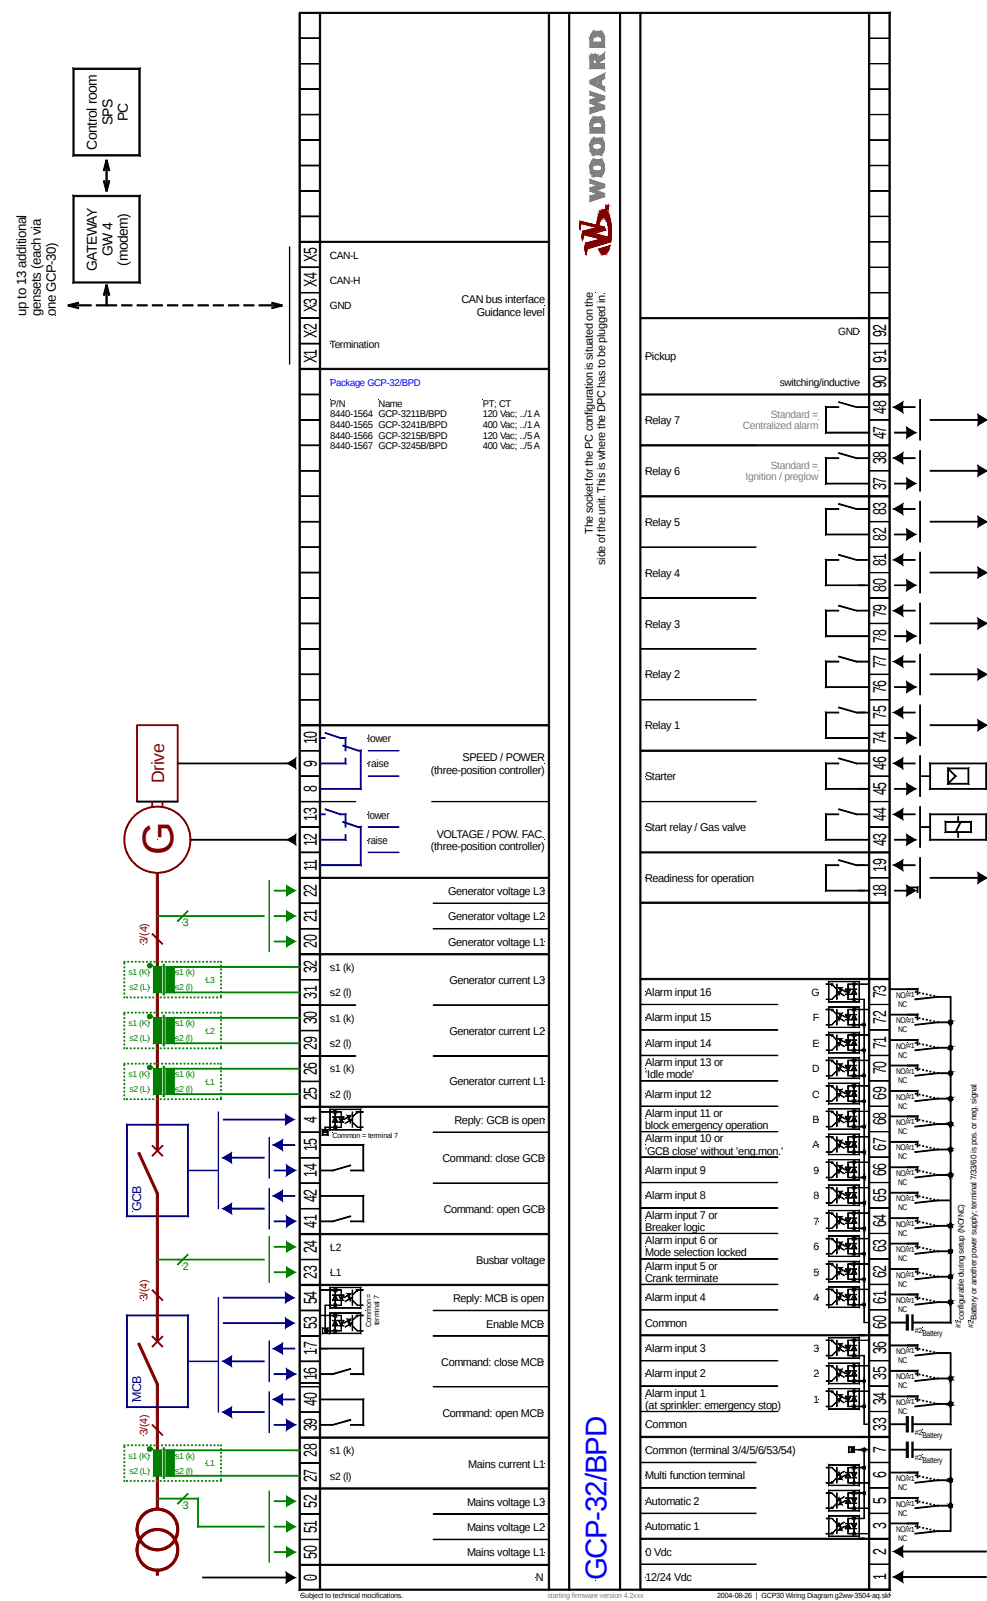


Figure 4-8: Wiring diagram GCP-32/BPD Package

GCP-32/BPQ Package

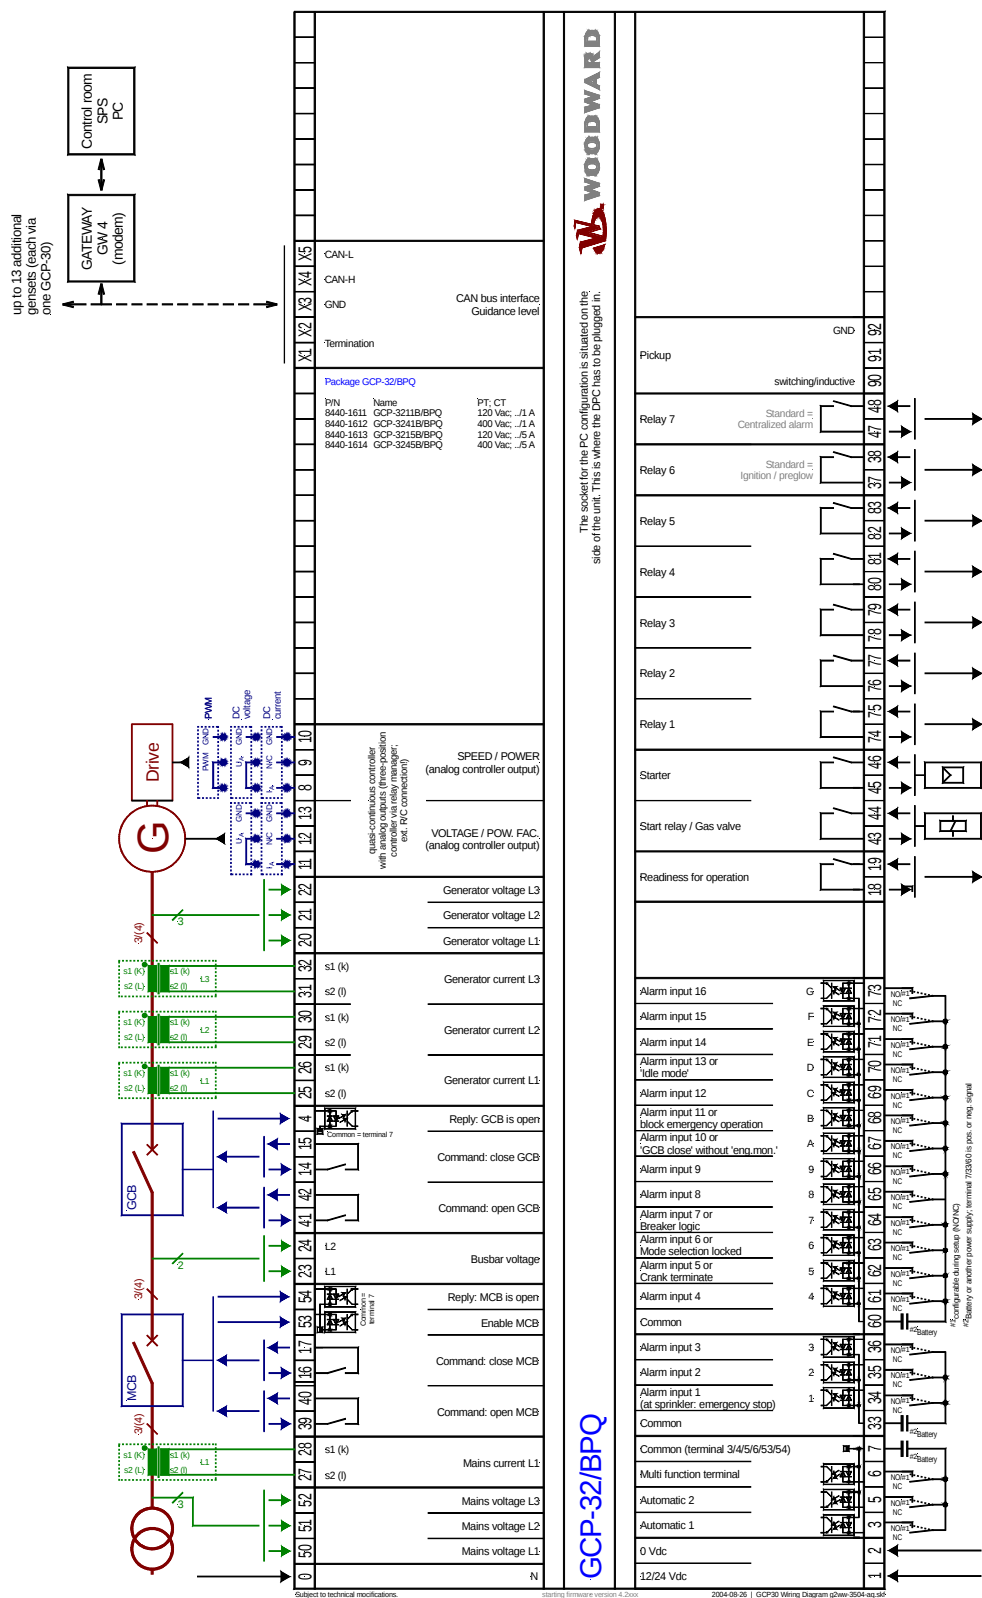


Figure 4-9: Wiring diagram GCP-32/BPQ Package

GCP-32/XPD Package

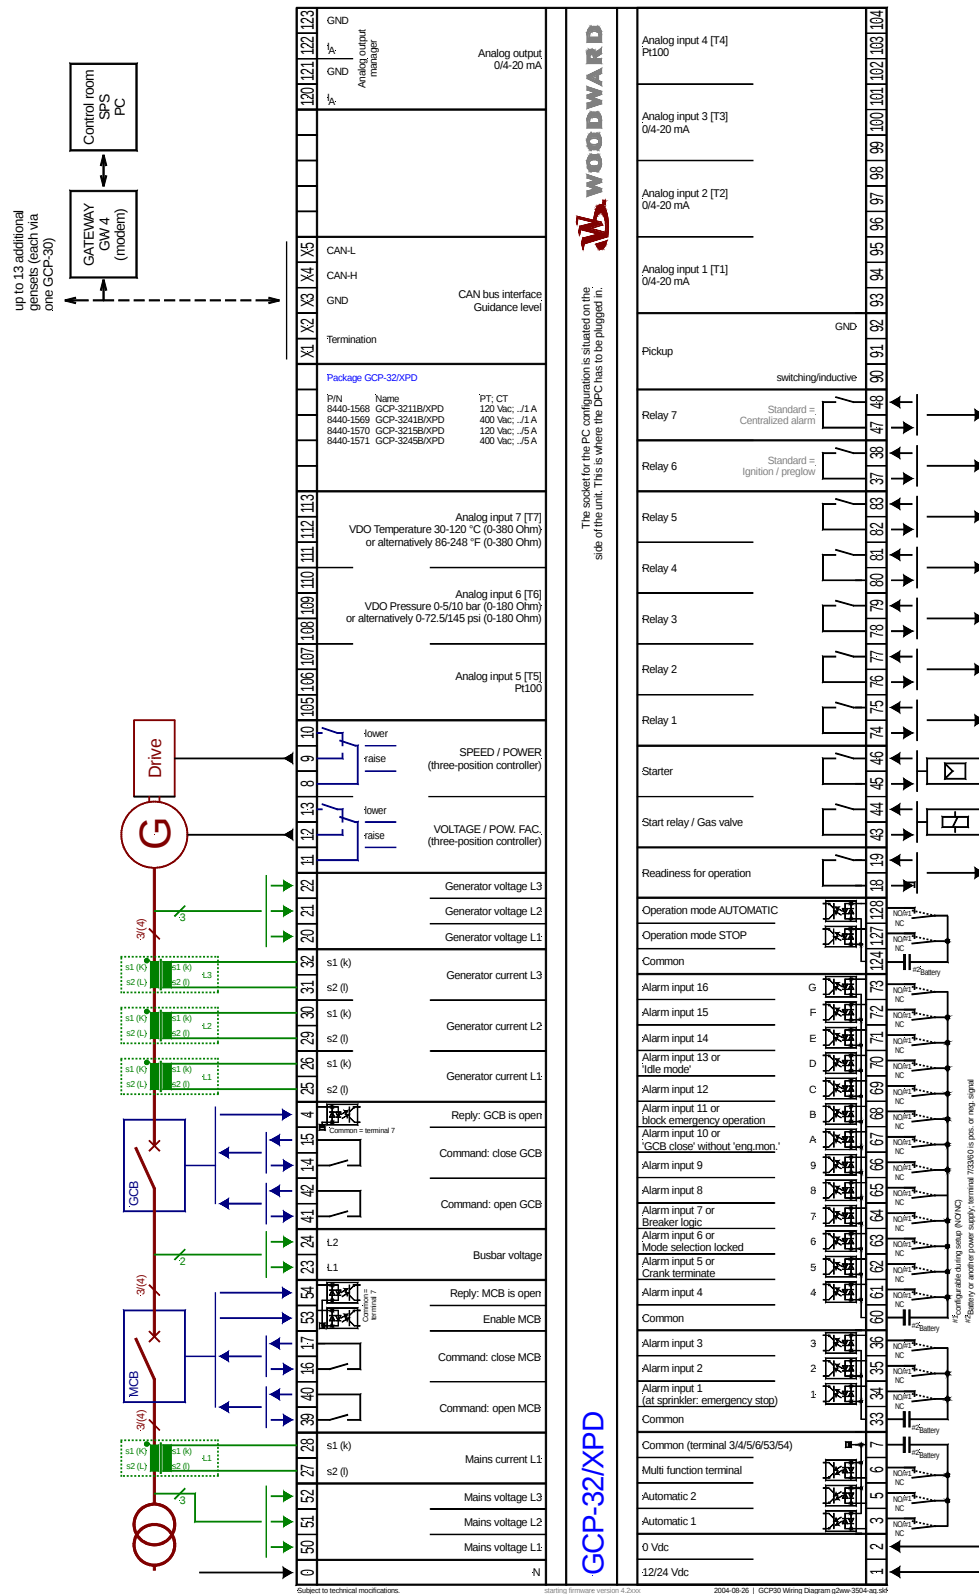


Figure 4-10: Wiring diagram GCP-32/**XPD** Package

GCP-32/XPQ Package

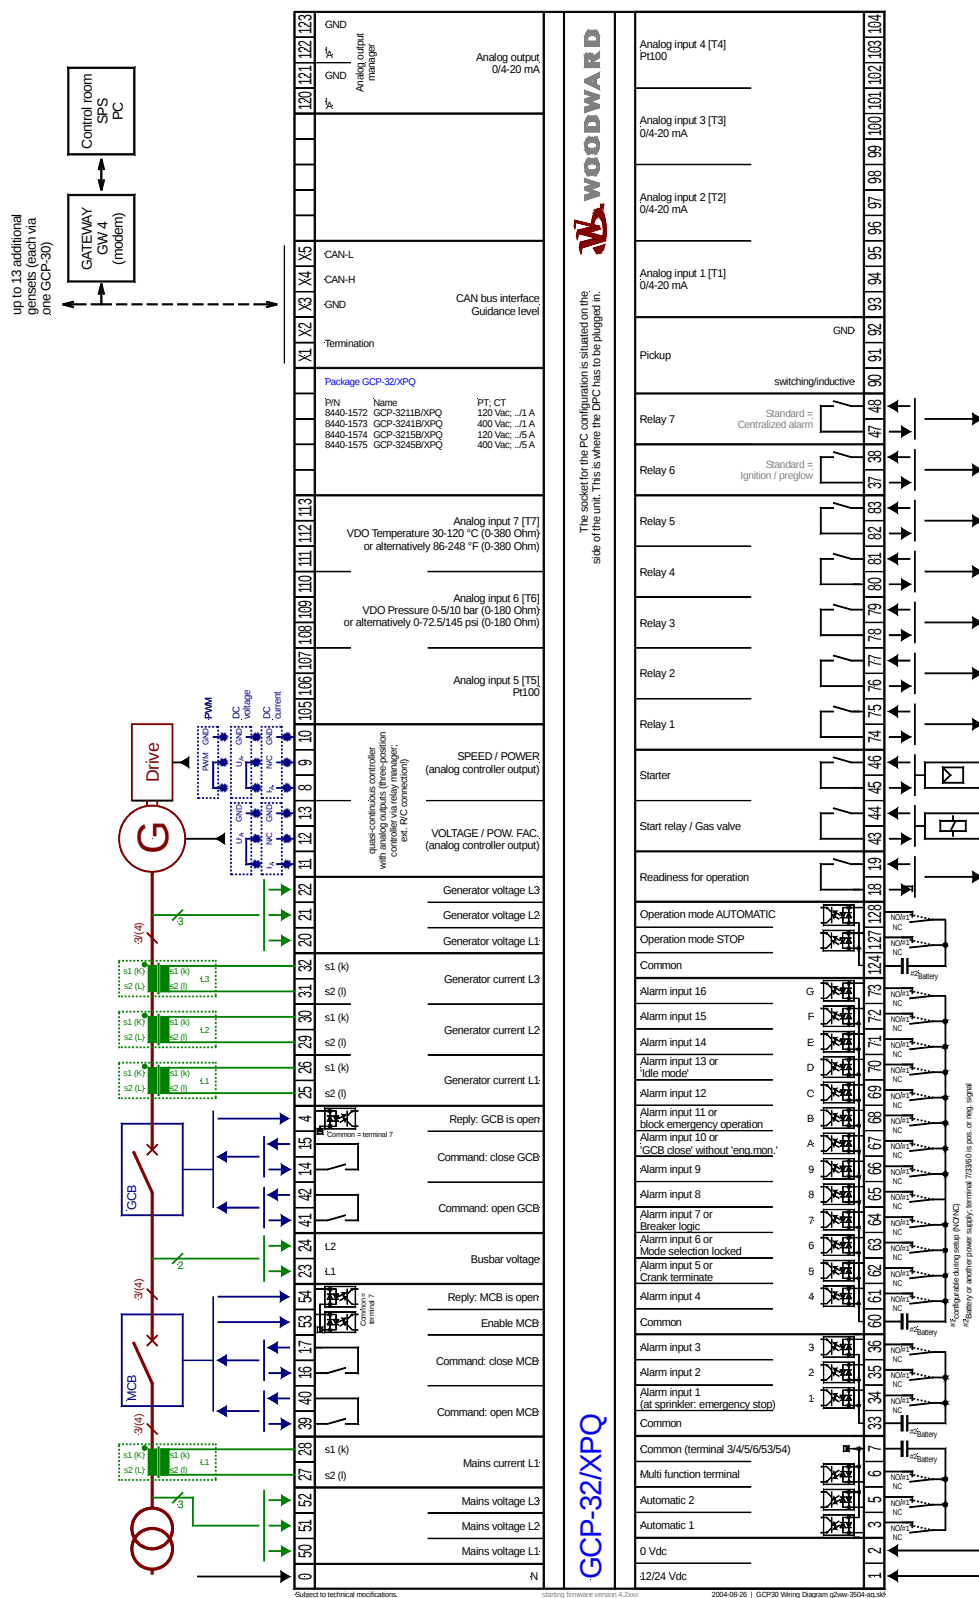


Figure 4-11: Wiring diagram GCP-32/XPQ Package

GCP-32/XPQ+SB03 Package

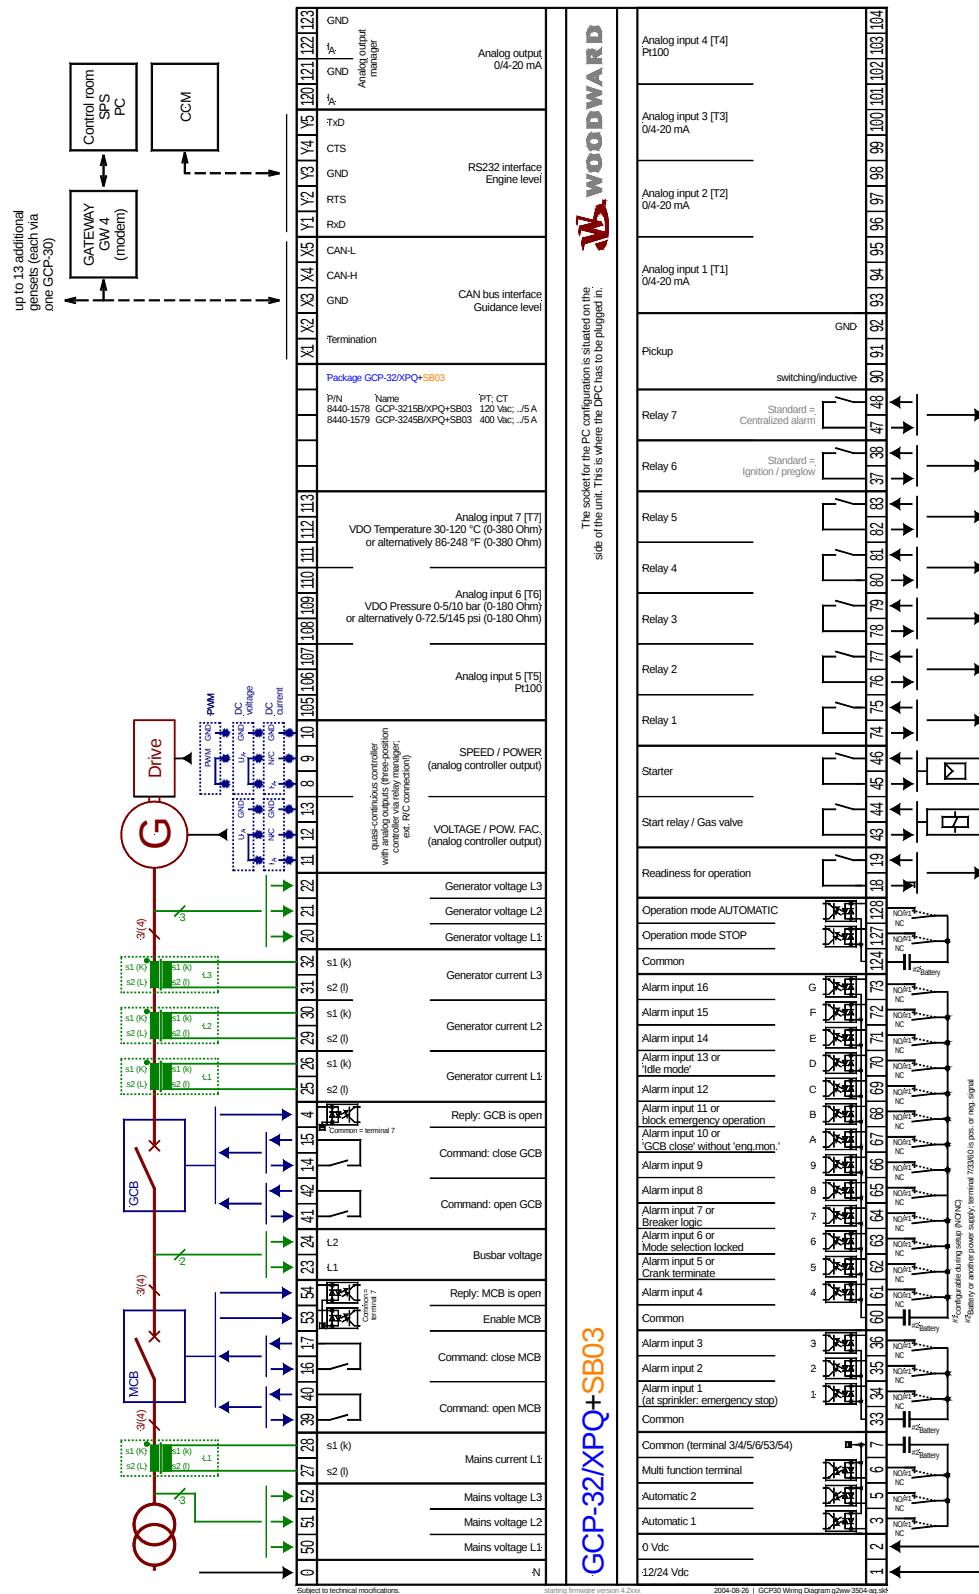


Figure 4-12: Wiring diagram GCP-32/XPQ+SB03 Package

GCP-32/XPQ+SC06 Package

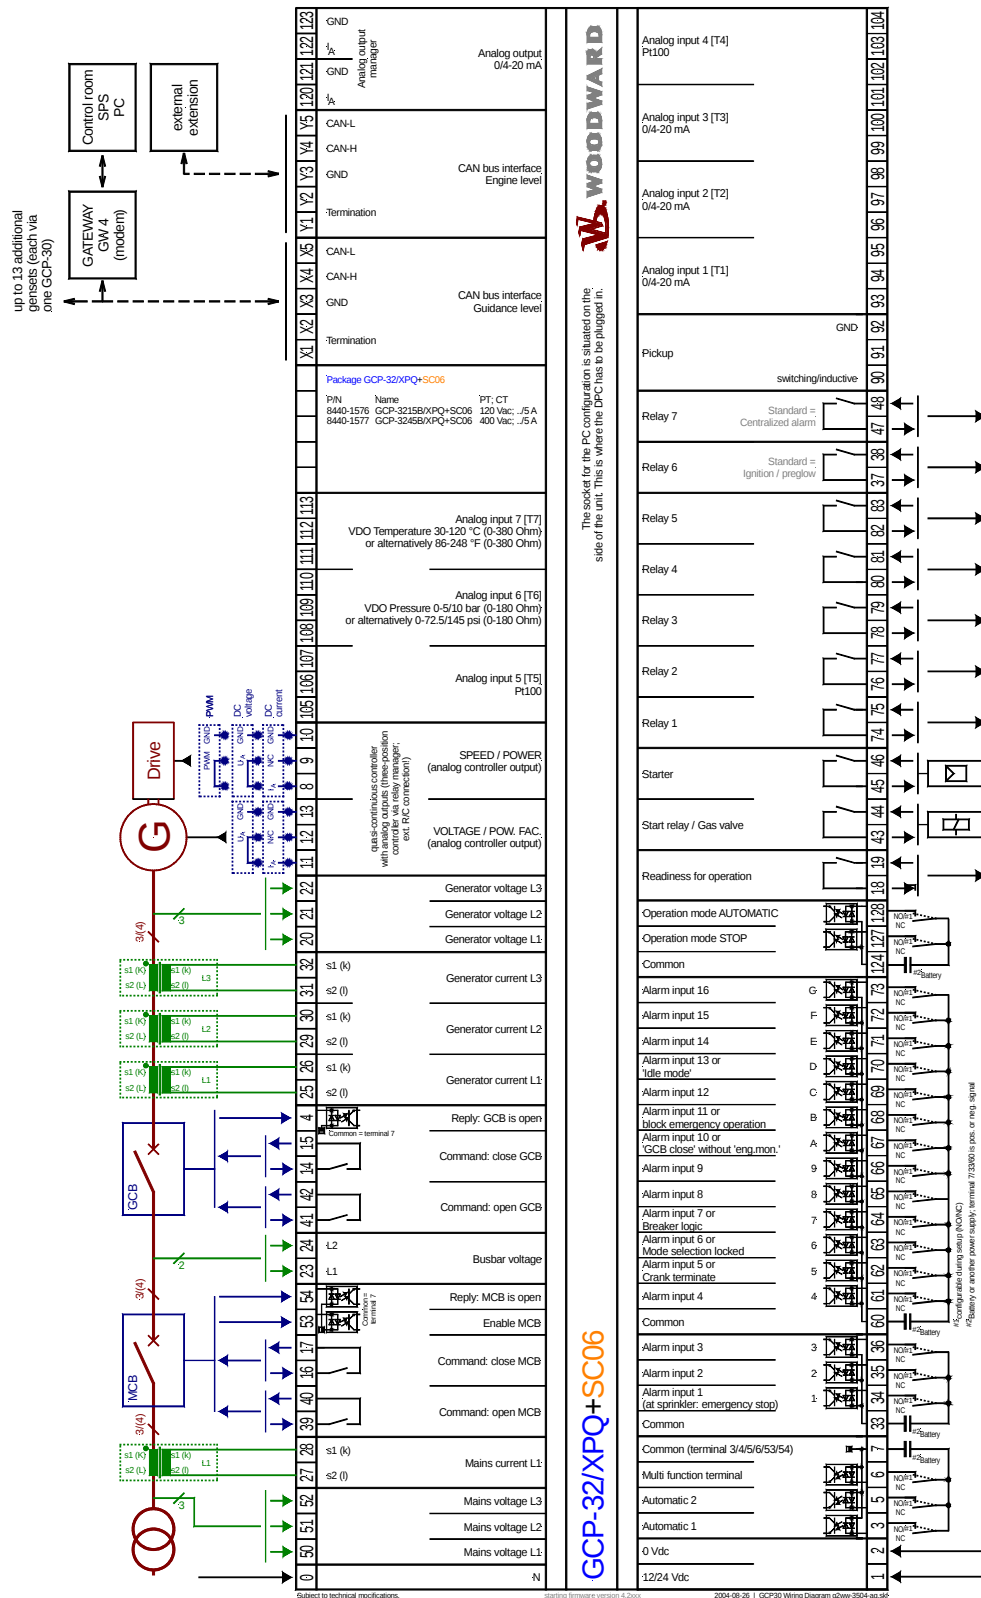


Figure 4-13: Wiring diagram GCP-32/XPQ+SC06 Package